




# SERVICE MANUAL

## MW/LW/SW/FM

### Hi-Fi Stereo Receiver

#### MODEL tfs 301

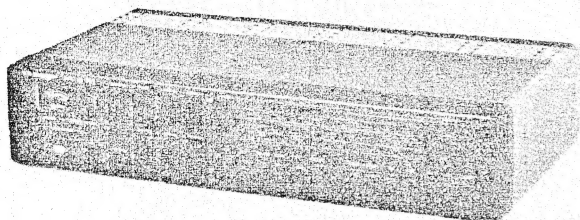

Germany:

TELETON Elektro GmbH.  
Oberhausener Str. 17 4000 Düsseldorf-Rath  
Tel. (0211) 65 30 81 TX 858 6768

United Kingdom:

TELETON Electro (UK) Co., Ltd.  
Teleton House, Waterhouse Lane,  
Chelmsford/Essex  
Tel. Chelmsford 62 442 TX 99 338

Technical Service Organization  
Waterhouse Lane, Chelmsford, Essex.  
Tel. 0245-54621 TX 99338

Belgium:

TELETON N.V.  
2200 Borgerhout Belgium  
Prins-Leopold-Straat 28  
Tel. 03/361045 TX32508  
03/357670

Netherlands:

TELETON NEDERLAND B.V.  
Marconiweg 10. Vianen  
Tel. 03473-3744 TX 40581

France:


TELETON Electro (France) S.à.r.l.  
21 rue Paul Lafargue  
94270 Le Kremlin-Bicêtre  
Tel. 677 6934 TX24 468

Switzerland:

TRANSACO AG  
Kanzleistrasse 126 8004 Zürich  
Tel. 39 45 60/23 50 40 TX 52 362

Specifications are subject to change without notice.


## CABINET EXPLODED VIEW

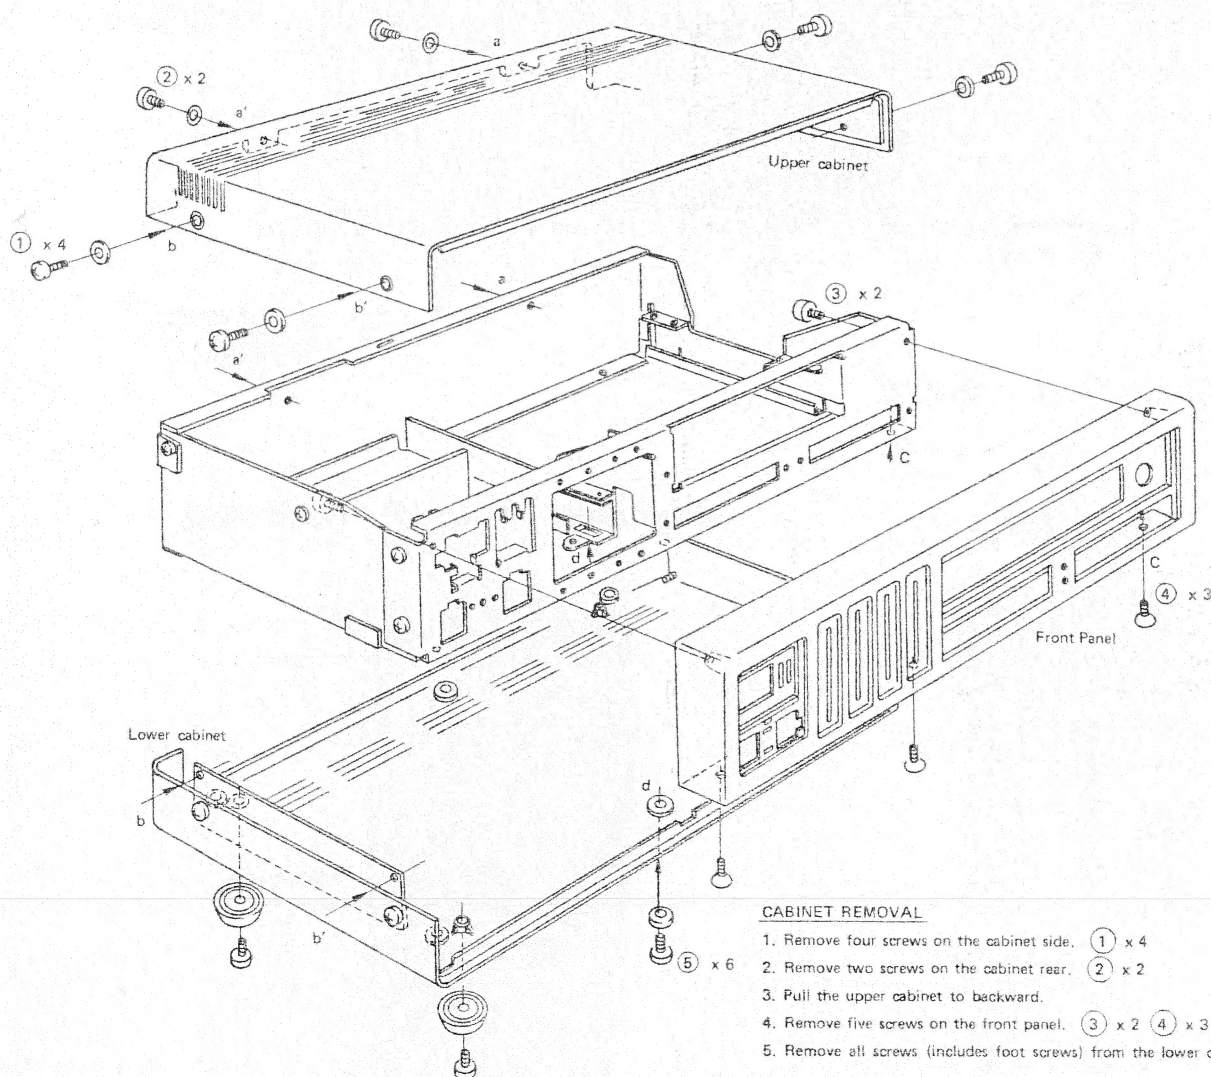


### CABINET REMOVAL

1. Remove four screws on the cabinet side. ① x 4
2. Remove two screws on the cabinet rear. ② x 2
3. Pull the upper cabinet to backward.
4. Remove five screws on the front panel. ③ x 2 ④ x 3
5. Remove all screws (includes foot screws) from the lower cabinet.


# HF-301 (FM AM Frontend, FM AM IF Amp. FM-MPX P. C. Board)

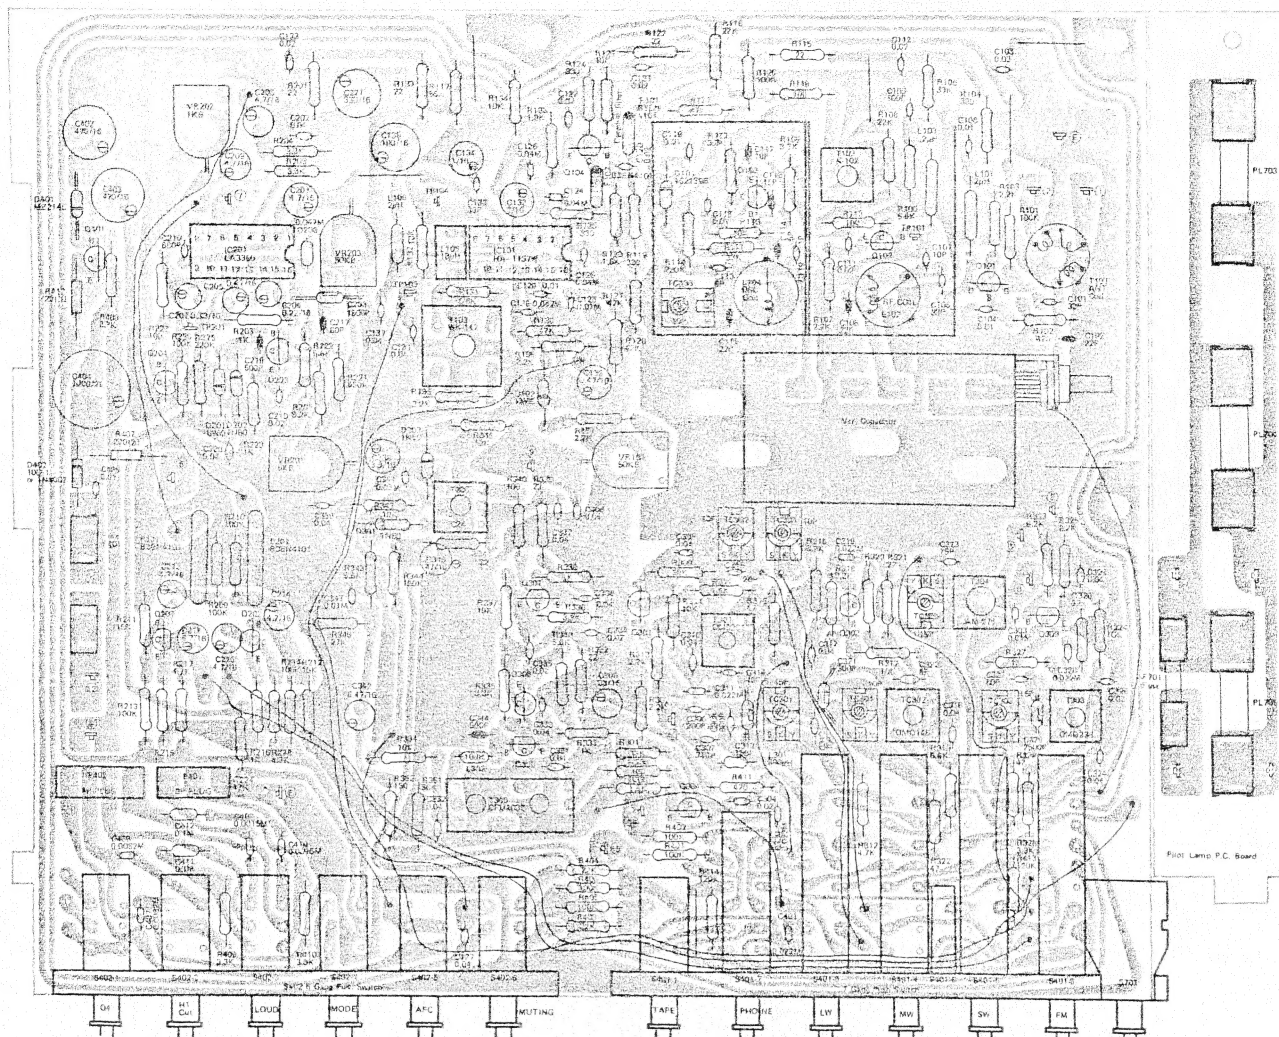


Audio Amp. P. C. Board

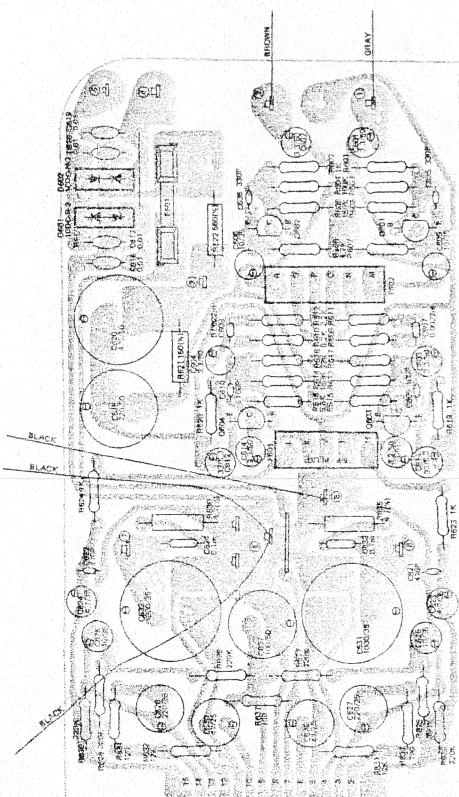

Equalizer Amp. P. C. Board

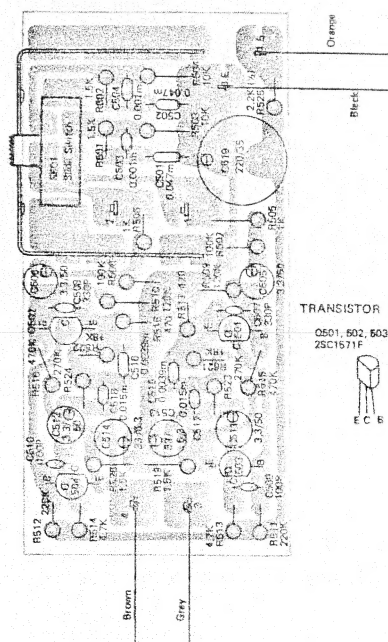


## CIRCUIT DIAGRAM

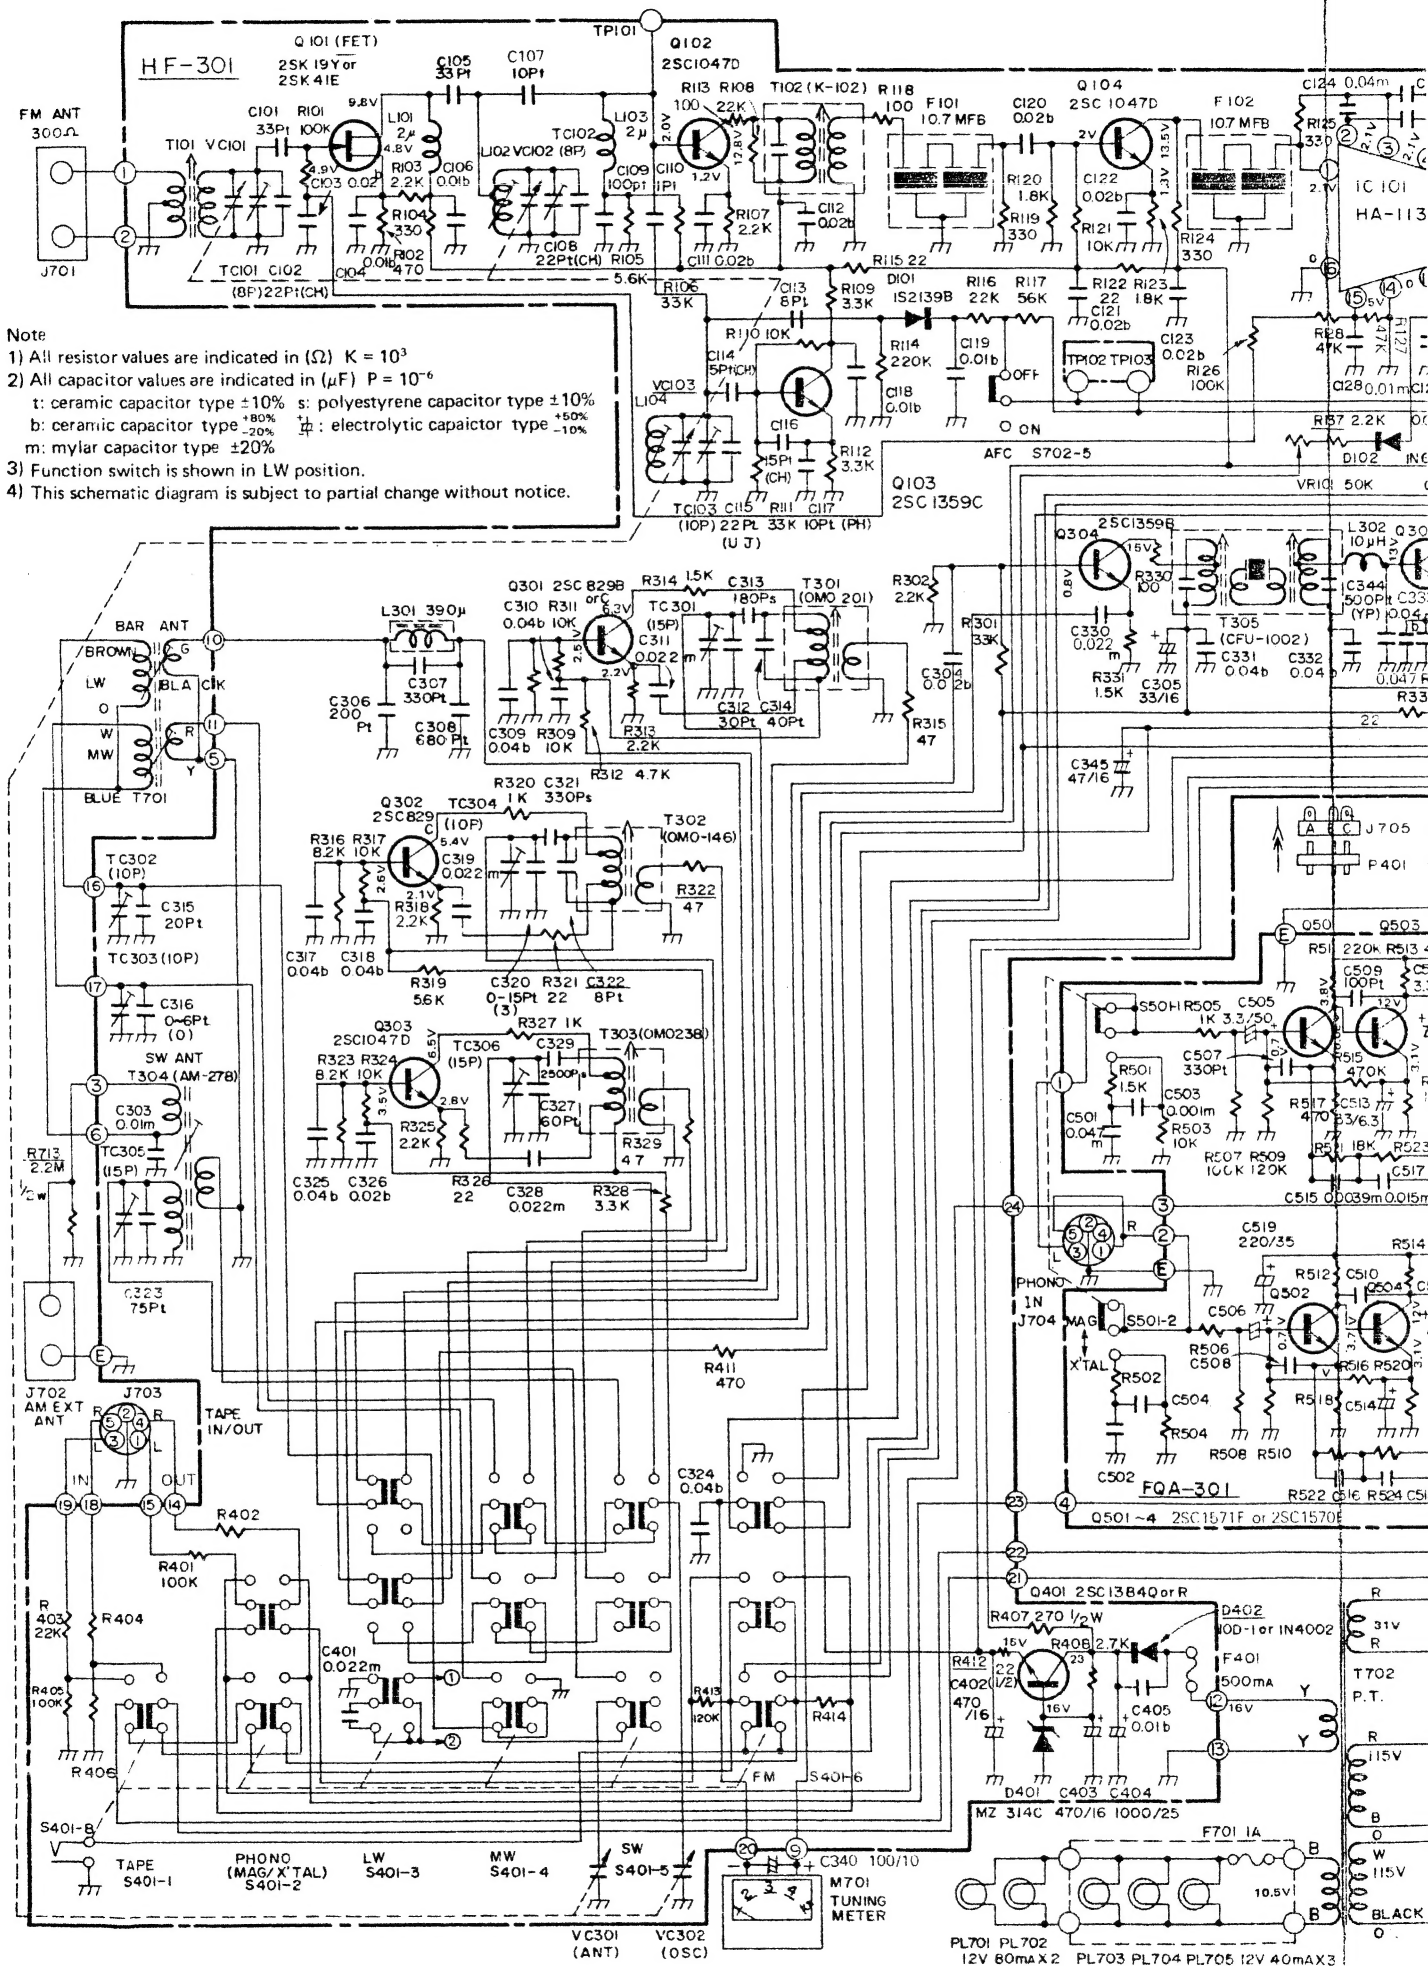



## DIAGRAM

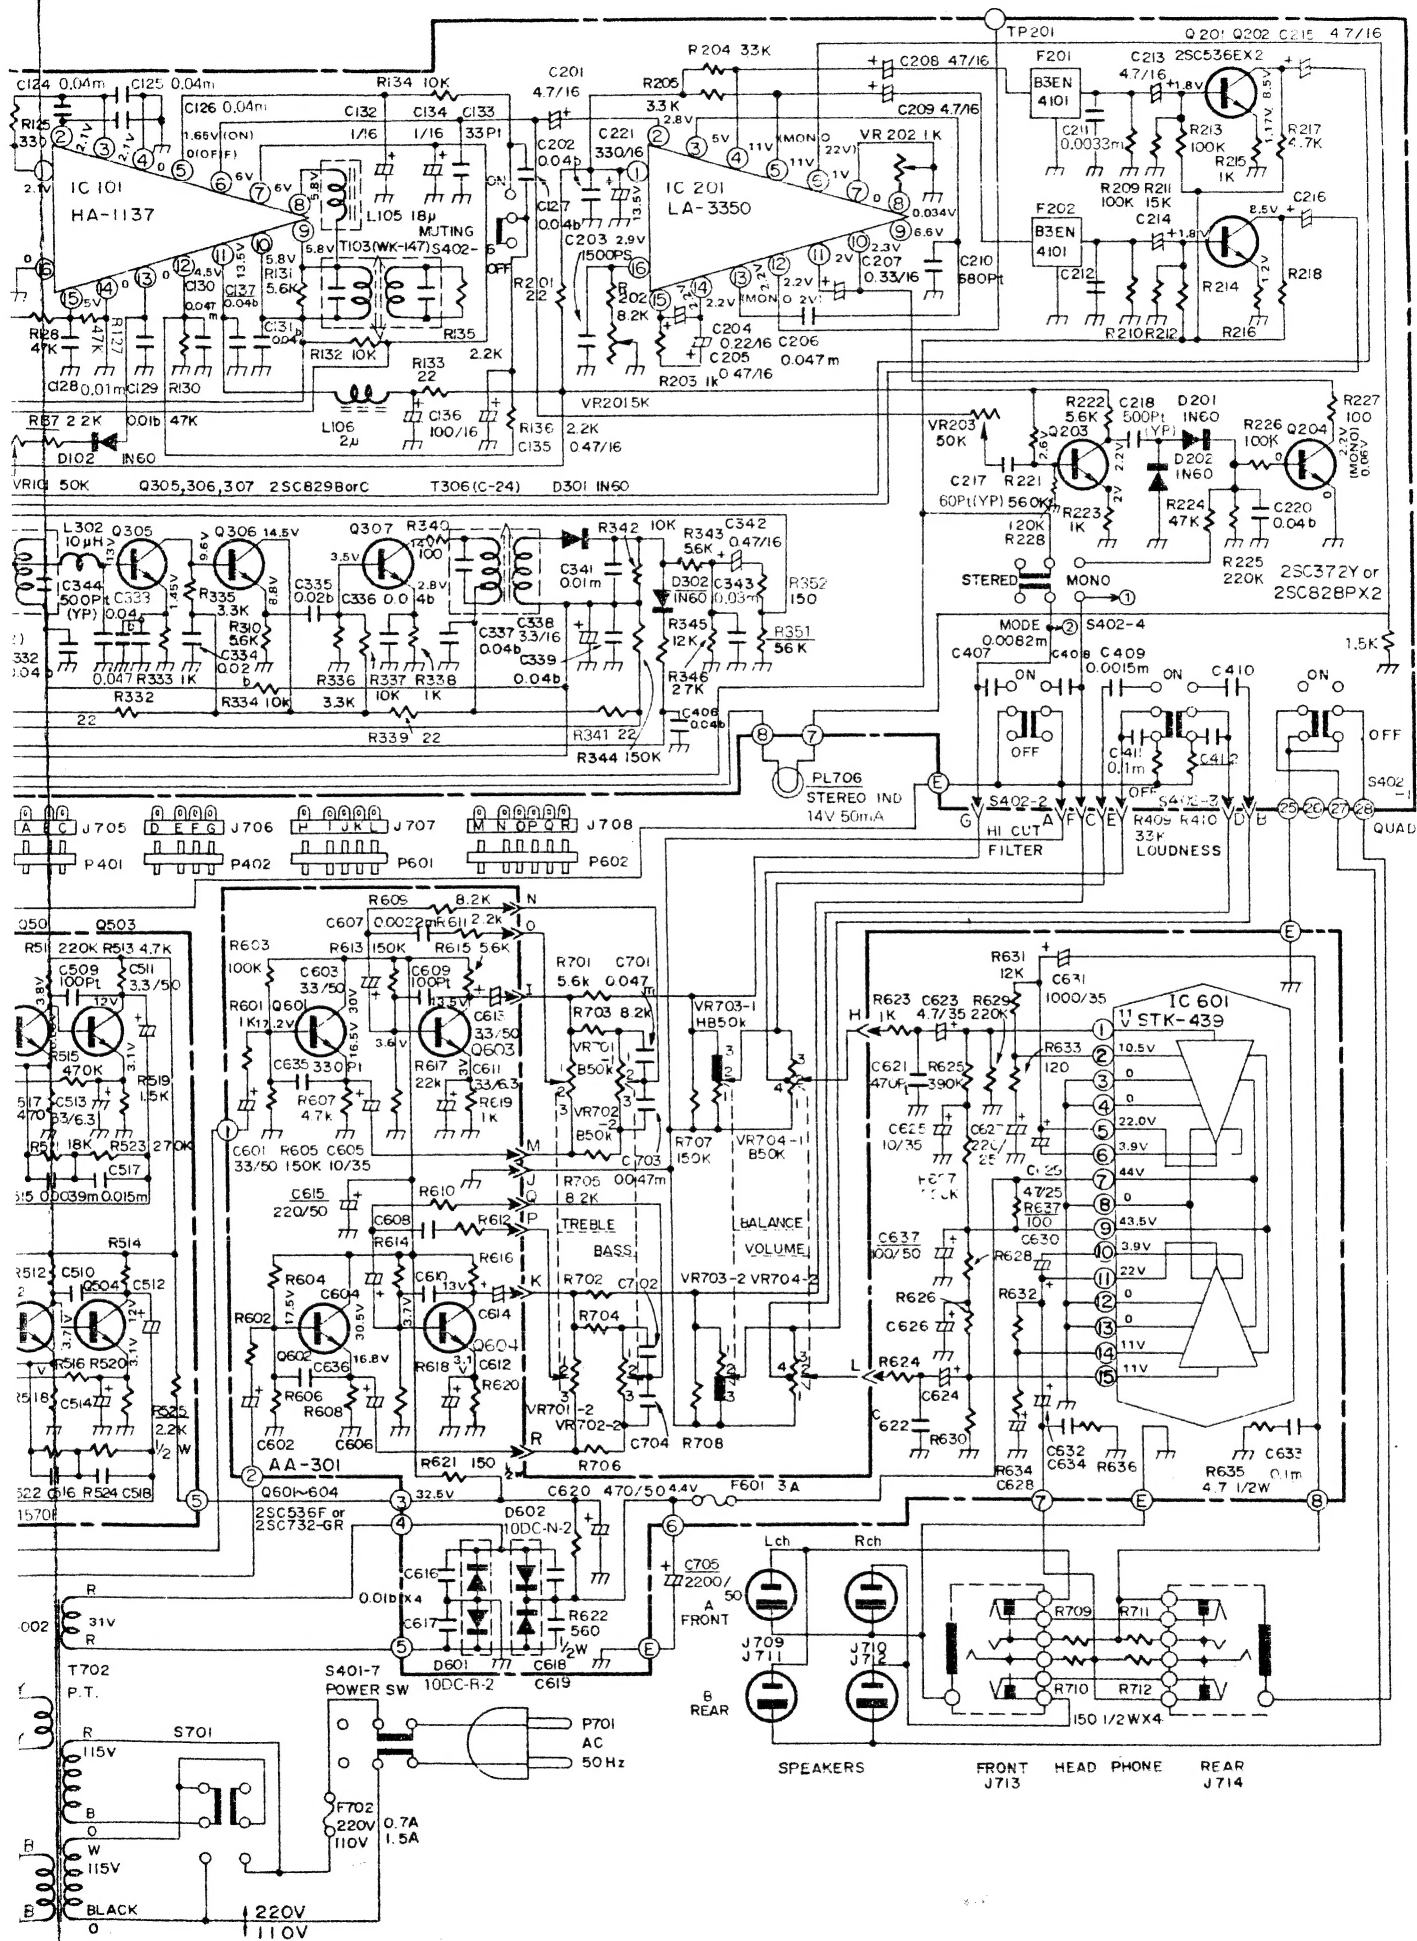

[illegible]

The overall length of a dial cord: 1100mm

